


The treatments feature on the XR5000 indicator provides a simple yet powerful solution to manage the application of health treatments for your animals:

- Treatments setting screen to create new or manage treatments used on your farm. Simple step by step wizard to create a new treatment.
- Show multiple treatments on the weigh screen to record the amount given, batch, withholding period and/or export slaughter interval.
- Options to automatically repeat the same dose for all animals or alternatively calculate the amount based on each animal's weight.
- Alert or draft based on withholding period or export slaughter interval.

Note: This is only applicable to the XR5000 indicator.


1 Creating a treatment

1. Go to the **Settings** screen.
2. Press **Treatments**
3. Press **New**
4. There are six steps to create a new treatment; press Next to step through each screen.
If you need help about any field you have highlighted on the screen, press **?**
5. When you finish, the treatment is added to the list of treatments. The default is to show a new treatment on the weigh screen (**Show** option ticked).

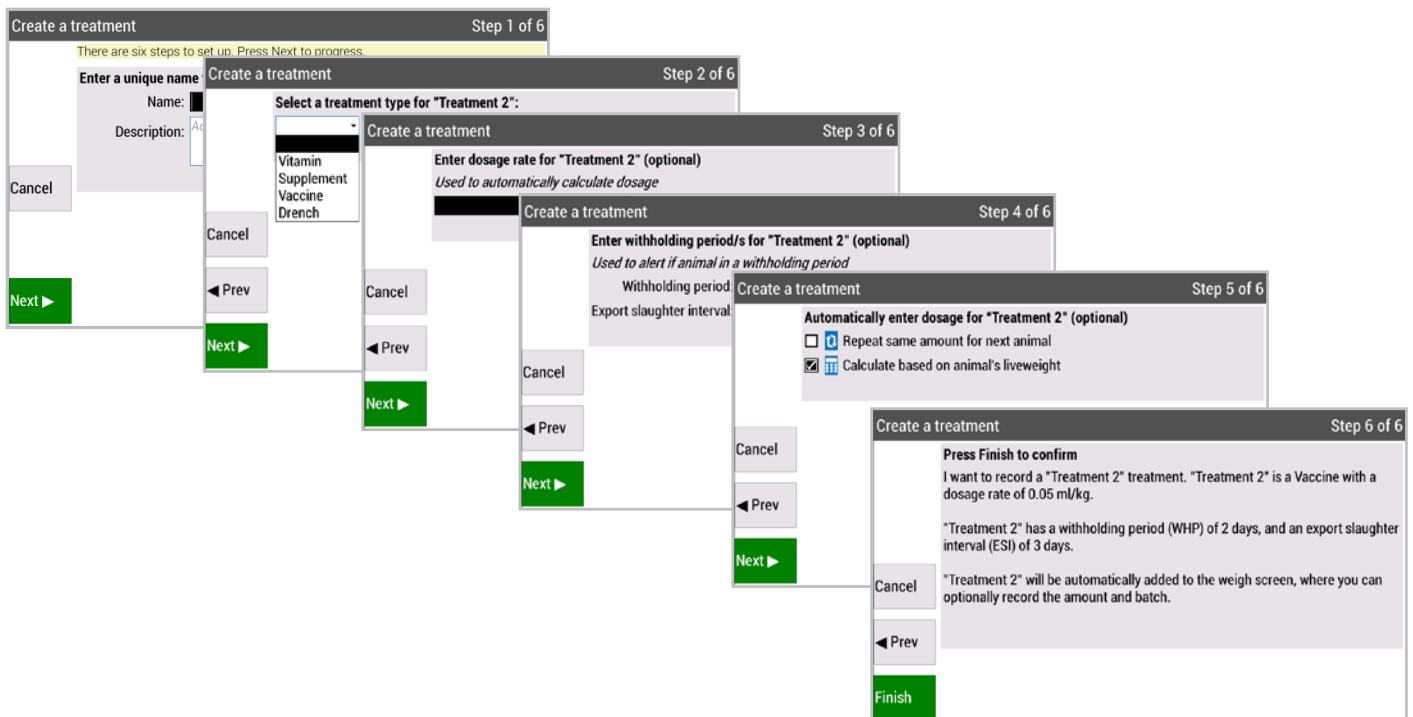


2 Selecting treatments to display and record

The **Settings > Treatments** screen lists all treatments that you can select to display on the **Weigh** screen.

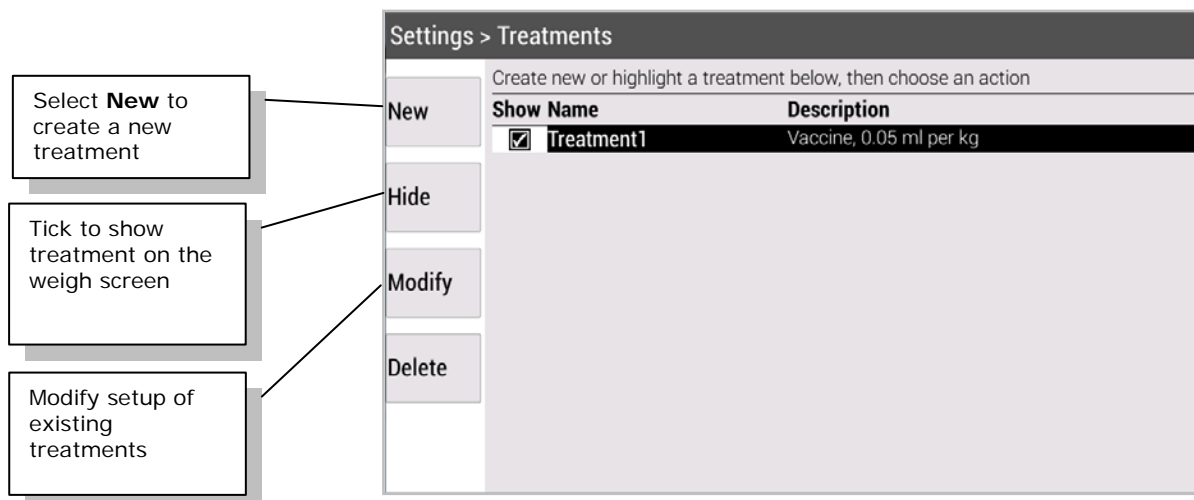

3 Recording a treatment in a session

To record a treatment you need to add it to the weigh screen. In the example below we have created "Treatment2".

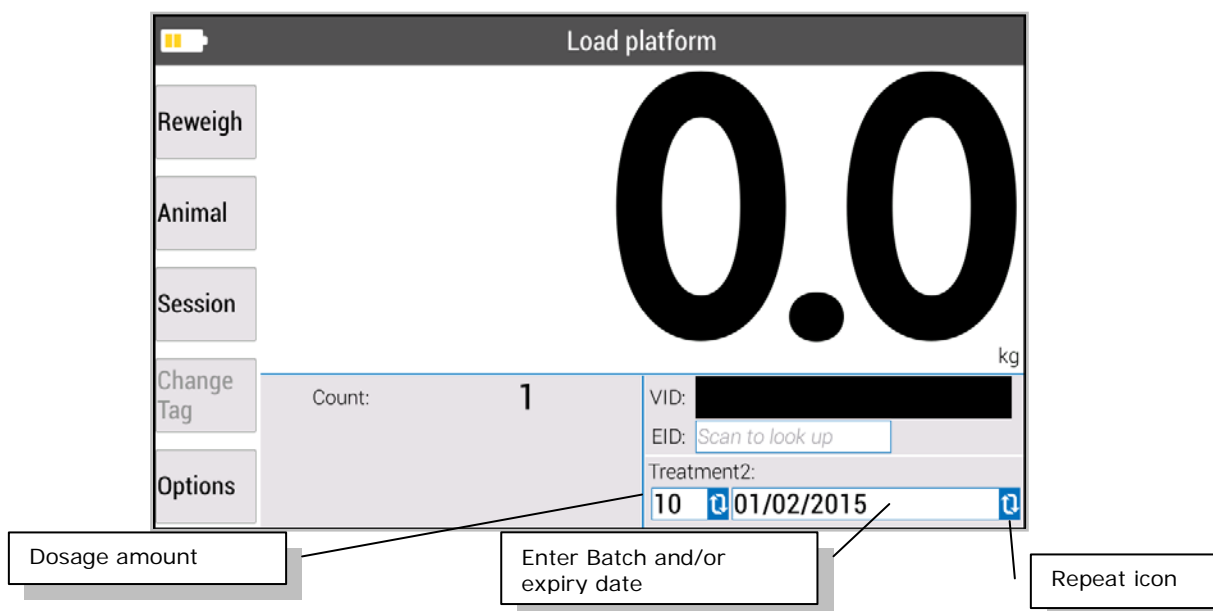

Dosage amount

There are three options for entering a dosage amount:

- 1 Enter the amount manually for each animal. Tip: Use this when only applying a treatment to some animals in the session.
- 2 Repeat the same dosage amount for all animals in the session. On the treatment settings screen select the repeat option. On the weigh screen a small repeat icon will be displayed (as above). For the first animal, enter the dosage amount for all animals in the session.
- 3 Calculate the dosage amount automatically based on the animal's weight. On the treatment settings screen, select the calculate option. On the weigh screen a small calculator icon will be displayed to the dosage amount.

Batch or Expiry date

You can optionally enter a batch and/or expiry date for a treatment. This will be repeated for the next animal in the session. Should you change the bottle mid-way through a session, just update the batch and continue.

Recorded information

The following items will be recorded in the session, each as a separate column:

- Dosage amount (Entered or calculated)
- Batch (if entered)
- WHP date (Withholding period) - If WHP has been entered in the treatment setup screen.
- ESI date (Export slaughter interval) If ESI has been entered in the treatment setup screen.

4 Reviewing treatment information

You can view information about treatments applied to animals on the following screens:

- **Session > Session Animals** – Columns in the table for dosage, Batch, WHP date and/or ESI Date.

VID	Treatment1 Dosage	Treatment1 Batch	Treatment1 WHP Date
123	10	Bb3698563	22-10-2014

- **Animal > Lifetime** and **Animal > All Animals** screens - WHP (withholding period) date and ESI (Export Slaughter Interval) date.



VID	Group	Status	Location	Sire	Dam	WHP Date	ESI Date
123						23-10-2014	24-10-2014


- **Animal > History** screen - List of treatments applied to an animal.

Date	LWG (kg)	C.Score	Health	Treatments
21-10-2014				Treatment 1, Treatment 2

5 Removing a treatment applied to an animal

Maybe you mistakenly recorded that you applied a treatment to an animal when you weighed it. You can remove an applied treatment from an animal record if you need to.

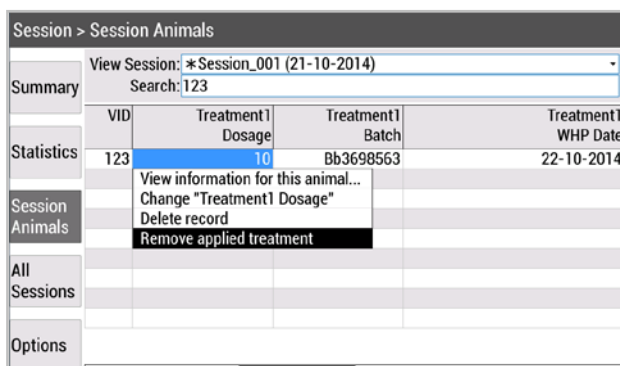

- 1 Go to the **Session > Session Animals** screen.
- 2 Select the session in the **View Session** drop down list.
- 3 In the animal record, highlight one of the cells displaying the treatment details (**Dosage** or **Batch**), then press .
- 4 Select **Remove applied treatment** from the menu, then press .




VID	Treatment1 Dosage	Treatment1 Batch	Treatment1 WHP Date
123	10	Bb3698563	22-10-2014

View information for this animal...
Change "Treatment1 Dosage"
Delete record
Remove applied treatment



6 Modifying a treatment

- 1 Go to the **Settings** screen.
- 2 Press .
- 3 Highlight the treatment you want to modify and press .
- 4 You can now change the existing settings for the treatment.

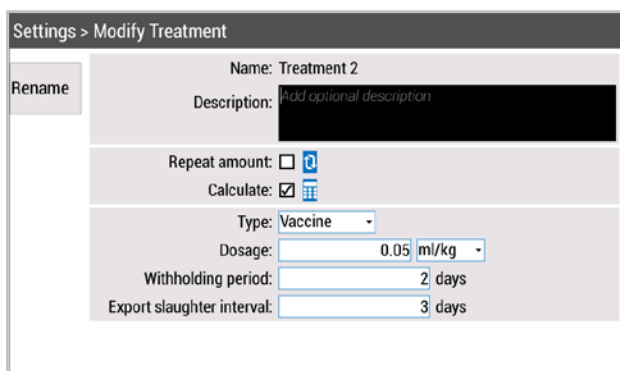


Settings > Modify Treatment

Rename Name: Treatment 2
Description: *Add optional description*

Repeat amount: 
Calculate: 

Type: Vaccine
Dosage: 0.05 ml/kg
Withholding period: 2 days
Export slaughter interval: 3 days

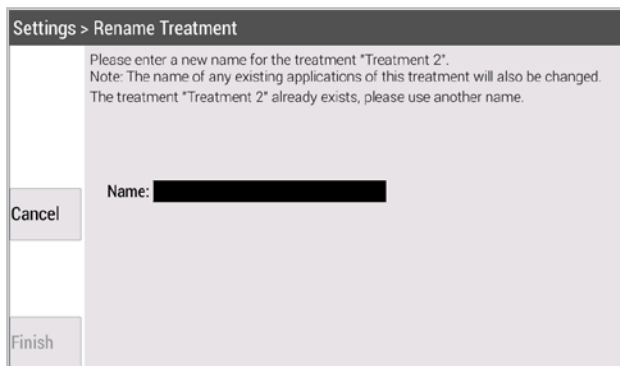

Settings > Rename Treatment

Please enter a new name for the treatment "Treatment 2".
Note: The name of any existing applications of this treatment will also be changed.
The treatment "Treatment 2" already exists, please use another name.

Name:

Cancel

Finish

For further information regarding your stock management system, contact Tru-Test Ltd on 1800 621 324 (AU) or 0800 878 837 (NZ)

For technical support in New Zealand, contact 0800 AGDATA (0800 243 282)

© Tru-Test Limited, 2015. All rights reserved.

Issue 1 8/2015